



WANDER

ARM-506

Create your perfect environment with Ellia Essential Oils and Diffusers.

Our beautiful diffusers gently lift the aroma of Ellia Essential Oils into the air to help you reduce stress, boost mental clarity, and soothe your body and mind. Ellia Diffusers are appealing, functional centerpieces that add natural style to your home.



REGISTER YOUR DIFFUSER

Registering your diffuser secures the benefits of your warranty (even if you lose your receipt). It also makes it easier for us to assist you if you ever have an issue with your product.

www.ellia.com/product-registration

UNIQUE FEATURES AND SPECIFICATIONS

Rechargeable ultrasonic technology

This rechargeable diffuser uses ultrasonic, high-frequency technology to convert the water and essential oil into a fine mist that is dispersed into the air evenly, delivering natural aroma to enhance your mood.

White light

The gentle glow creates a peaceful environment.

Runtime

Up to 4 hours of continuous runtime or 8 hours of intermittent runtime.

Soothing humidity

Alleviates dry air.

 
Auto-shutoff protection

When your diffuser has a low water level, it will automatically shut off. Note a small amount of water will remain in the reservoir.

Reservoir capacity


135 ml

PARTS AND PIECES

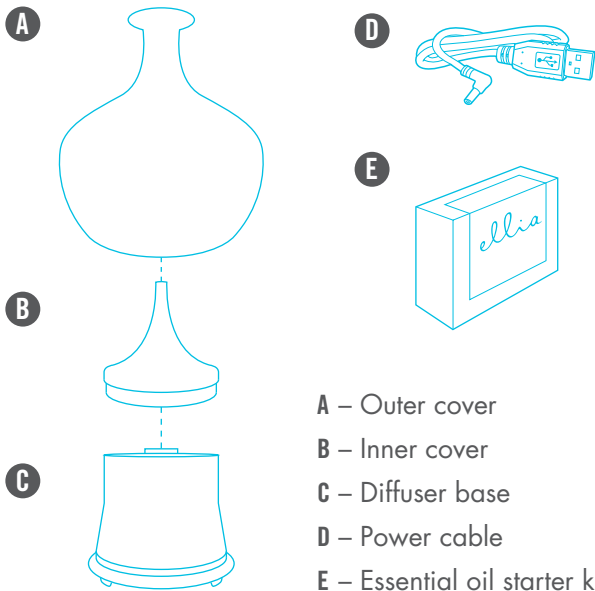


- A – Outer cover
- B – Inner cover
- C – Diffuser base
- D – Power cable
- E – Essential oil starter kit

 HOW TO USE AND DIFFUSE

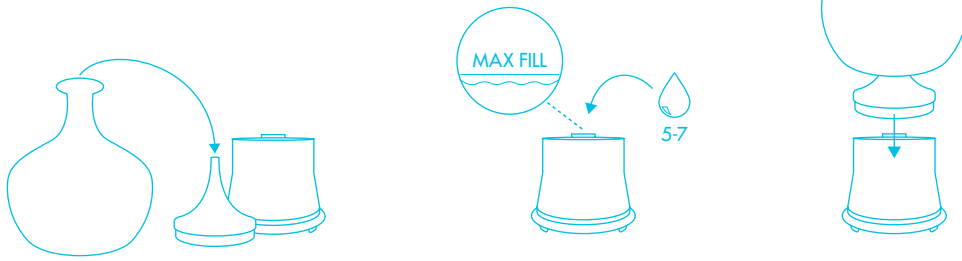

1. Remove outer cover from the base. Next, remove the inner cover.
2. Pour water into the reservoir until it reaches the max fill line, then add 5–7 drops of essential oil to the water.
3. Put the inner and outer covers back on.
4. Choose your aroma mist and light options, listed on the next page.

Aroma mist

 
Your diffuser has 2 mist options. Press  once for continuous mist, which will run for up to 4 hours. Press again for intermittent mist (30 seconds on, 30 seconds off), which will run for up to 8 hours. Press a third time to turn the mist off. When your diffuser has a low water level, it will automatically shut off. Note a small amount of water will remain in the reservoir.

Recharging your diffuser

Your diffuser has a rechargeable lithium-ion battery that will run up to 4 hours on the continuous setting. The LED indicator light at the bottom of your diffuser will flash red when your battery needs to be charged. Recharge using the power cord. It takes 6 hours to fully recharge your diffuser. A solid red light will indicate your diffuser is charging and will turn off when fully charged.

White light

Press  once to turn on the white light. Press again to turn the light off.

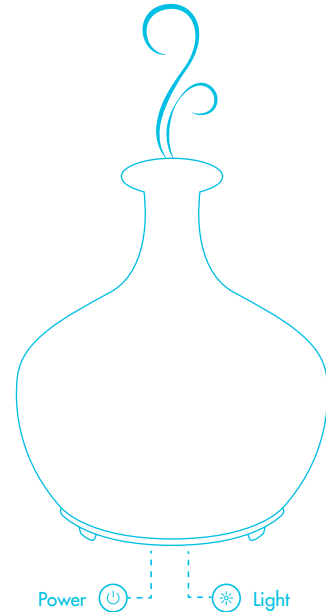

ESSENTIAL OILS

Visit us online to stock up on your favorite Ellia Essential Oils, including our single notes and signature blends.

www.ellia.com

CLEANING AND CARE

1. Before cleaning the unit, turn the power off and make sure the adapter is unplugged from the diffuser and outlet.
2. Remove the outer cover from the base. Next, remove the inner cover.
3. Carefully pour any remaining water and essential oil out of the reservoir, from the drain side, opposite the air outlet. Be sure not to empty the reservoir near the air outlet in order to avoid malfunction.

To clean the surface

Clean the surface of your diffuser with a soft, damp cloth as often as needed.

To clean the reservoir and ultrasonic membrane

 
We recommend wiping the reservoir with a soft, damp cloth at least once every 2 weeks.

NOTE: Depending on your usage, and the amount of essential oil you use, you may want to clean the reservoir and ultrasonic membrane more frequently for best performance.

CLEANING AND CARE, CONT'D

For a more-thorough clean, pour a 50/50 mixture of vinegar and water into the reservoir, then let it soak for 5 minutes. Clean reservoir walls, base, and ultrasonic membrane with a soft-bristle brush (not included) and rinse. NEVER touch the ultrasonic membrane with your fingers, as the natural oils in skin can damage the membrane.

Clean the membrane every 2-3 weeks, depending on usage. Clean and dry the unit before extended periods of inactivity.

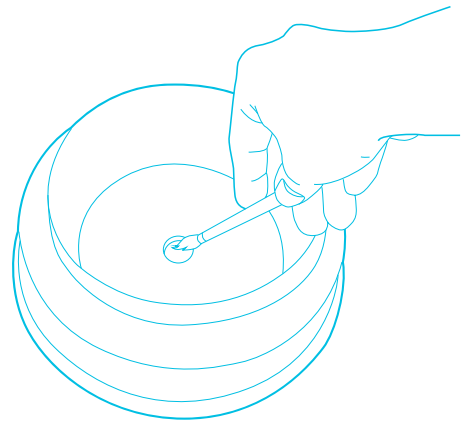

TROUBLESHOOTING

Problem	Possible cause	Solution
No mist	Battery is not charged	Plug the power cable in and press the power button
	Insufficient water	Refill the water reservoir
	Water is exceeding the max fill line	Dump the excess water out of the reservoir
	The ultrasonic membrane is clogged with essential oil buildup	Clean the membrane by following the aforementioned instructions
	Air bubble trapped above transducer	Empty the water reservoir and refill

THE ELLIA® FAMILY

Our range of eco-inspired products is designed to complement your lifestyle and decor. Once you try an Ellia diffuser, you'll want one for every room in your home. Add to your own Ellia collection or buy one as a thoughtful gift.

Browse the entire product family at www.ellia.com.

CONTACT US

Questions or concerns? We're here to help. Contact a Consumer Relations representative by phone or email to help answer any questions. Please be sure to have the model number of your product available.

For service in the USA

email: cservice@ellia.com
phone: 1-248-863-3160
8:30am–7:00pm EST Monday-Friday

For service in Canada

email: cservice@homedicsgroup.ca
phone: 1-888-225-7378
8:30am–5:00pm EST Monday-Friday



1-YEAR LIMITED WARRANTY

For detailed warranty instructions, visit www.ellia.com.

To obtain warranty service on your Ellia product, contact a Consumer Relations representative at the telephone number or email address listed below. Please make sure to have the model number of the product available.

For service in the USA

email: cservice@ellia.com

phone: 1-248-863-3160

8:30am–7:00pm EST Monday-Friday

For service in Canada

email: cservice@homedicsgroup.ca

phone: 1-888-225-7378

8:30am–5:00pm EST Monday-Friday

FCC AND IC STATEMENTS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules and CAN ICES-3 (B)/NMB-3 (B). These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by HoMedics could void the user's authority to operate this equipment.

This product has been tested and complies with the requirements for Federal Communication Commission, Part 18 and CAN ICES-1/NMB-1. Although this product is tested and complies with FCC, it may interfere with other devices. If this product is found to interfere with another device, separate the other device and this product. Conduct only the user maintenance found in this instruction manual. Other maintenance and servicing may cause harmful interference and can void the required FCC compliance.

WARNING: This product has an internal, nonreplaceable lithium-ion battery. Please dispose in accordance with your local, state, province, and country guidelines. Batteries (battery pack or batteries installed) should not be exposed to excessive heat such as sunshine, fire, or the like.

©2019 HoMedics, LLC. All rights reserved. Ellia and Ellia Open Your Senses are registered trademarks of HoMedics, LLC.

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING:

READ ALL INSTRUCTIONS BEFORE USING.

- Always place diffuser on a firm, flat surface. A waterproof mat or pad is recommended for use under the diffuser.
- NEVER place it on a rug or carpet, or on a finished floor that may be damaged by exposure to water or moisture.
- Always unplug the unit from the electrical outlet immediately after using and before cleaning.
- DO NOT reach for a unit that has fallen into water. Unplug it immediately.
- DO NOT place or drop into water or other liquids.
- DO NOT use water above 86°F.
- Use this unit only for its intended purpose as described in this document, the Quick-Start Guide and User Guide.
- DO NOT use attachments not recommended by Ellia or HoMedics; specifically, any attachments not provided with this unit.
- NEVER drop or insert any object into any opening.
- DO NOT place the diffuser near heat sources, such as a stove.
- Always keep the cord away from high temperatures and fire.
- To disconnect, turn unit off, then remove the plug from the outlet.
- DO NOT use outdoors. For indoor use only.
- NEVER cover the unit while it is operating.
- If the cord sustains damage, you must stop using this product immediately and contact Ellia Consumer Relations (see Warranty section for Consumer Relations contact information).
- Perform regular maintenance on the ultrasonic membrane.
- NEVER use detergent to clean the ultrasonic membrane.
- NEVER clean the ultrasonic membrane by scraping with a hard object.
- DO NOT attempt to adjust or repair the unit. Servicing must be performed by qualified personnel.
- Stop using this unit if there is an unusual noise or smell.
- Unplug this unit when not in use for a long period of time.
- DO NOT touch the water or any parts of the unit that are covered by water while the unit is on or plugged in.
- DO NOT wash, adjust, or move this unit without first unplugging it from the electrical outlet.
- Keep this unit out of reach of children.