



ellia

PERSONAL PORTABLE AROMA DIFFUSER

ARM-120

Create your perfect environment with Ellia Essential Oils and Diffusers.

Our beautiful diffusers gently lift the aroma of Ellia Essential Oils into the air to help you reduce stress, boost mental clarity, and soothe your body and mind. Ellia Diffusers are appealing, functional centerpieces that add natural style to your home.



REGISTER YOUR DIFFUSER

Registering your diffuser secures the benefits of your warranty (even if you lose your receipt). It also makes it easier for us to assist you if you ever have an issue with your product.

www.homedics.com/product-registration

UNIQUE FEATURES AND SPECIFICATIONS


Aroma

This diffuser operates without water. Just add pure essential oils to the aroma pad to deliver natural aroma to enhance your mood.


Color-changing light

The gentle glow creates a peaceful environment. Choose your desired color to best match your mood


PARTS AND PIECES

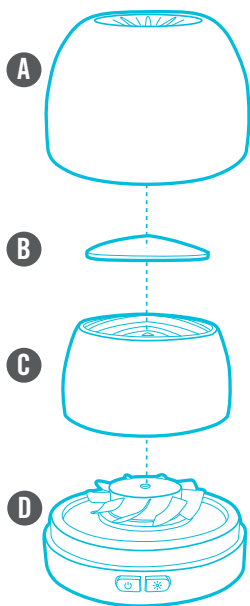


- A – Outer cover
- B – Essential oil pad
- C – Inner cover
- D – Diffuser base
- E – Replacement oil pads
- F – Power cable
- G – Essential oil starter kit

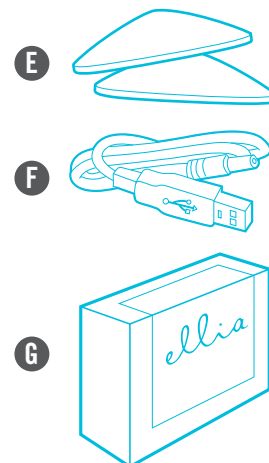


HOW TO USE AND DIFFUSE

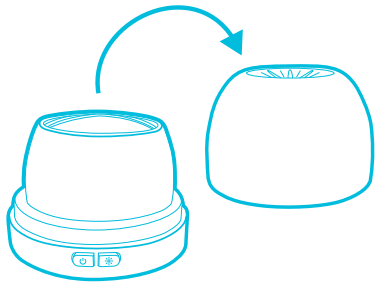

1. Remove the cover from the base, then add 5–7 drops of essential oil on the microfiber pad.

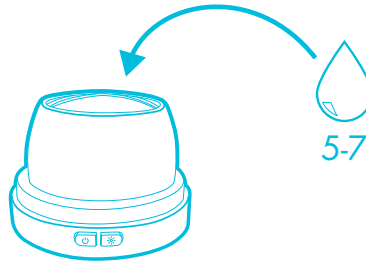

2. Place the cover back on the base.

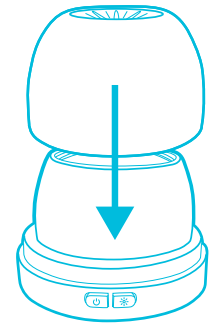


3. Choose your aroma and light settings.

When using the power cable

When using the power cable, plug the power cable into a USB port, then plug the other end into your diffuser. The diffuser will continue to operate as long as it is plugged in.

When using AAA batteries

Open the battery compartment, insert 2 batteries, then close the compartment. The diffuser will continue to operate until the battery power is depleted.

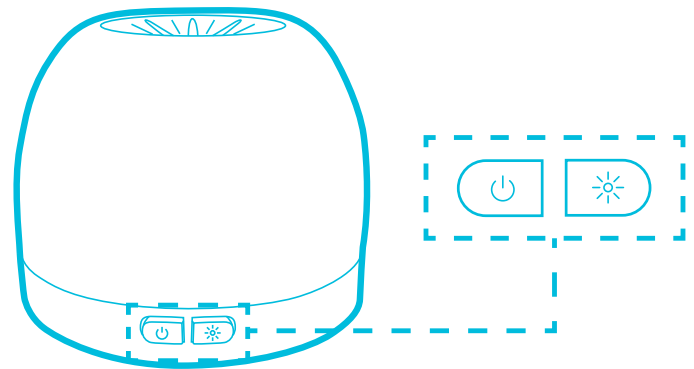

Aroma

Your diffuser has two aroma options. Press ⏻ once for continuous aroma. Press again for intermittent aroma (30 seconds on, 30 seconds off). Press a third time to turn the fan off.

Color-changing light

Press ☀️ once to turn on the color-changing light. Press again to stop on a preferred color. Press a third time to turn the light off.

CLEANING AND CARE

1. Before cleaning the unit, turn the power off and make sure the diffuser is unplugged.
2. Remove the cover and microfiber pad.
3. Use a soft cloth to wipe the inside and surface of the diffuser. Microfiber pads should be changed when switching to a different essential oil.

To clean the surface

Clean the surface of your diffuser with a clean, damp, soft cloth as often as needed.



ESSENTIAL OILS

Visit us online to stock up on your favorite Ellia Essential Oils, including our single notes and signature blends.

www.ellia.com

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Unit is not connected	Plug unit in
	Unit does not have batteries	Insert two AAA batteries
	Unit is powered off	Press the power button
Peculiar odor	Excessive oil has soaked the microfiber pad	Replace microfiber pad
Excessive noise	Unit is not level	Place unit on a flat, even surface

BATTERY PRECAUTIONS

1. Replace all batteries at the same time. Do not mix new and used batteries.
2. Clean the battery contacts and the contacts of the device with dry cloth prior to installing the batteries.
3. Ensure the batteries are installed correctly with regard to polarity (+/-).
4. Remove batteries from the unit when the unit will not be used for an extended period of time.
5. Keep batteries away from children.
6. Batteries are small objects and could be ingested. If swallowed, contact a physician at once.
7. Remove depleted batteries from the unit promptly. Dispose of used batteries safely.
8. Do not open batteries or dispose of in fire.

THE ELLIA™ FAMILY

Our range of eco-inspired products are designed to complement your lifestyle and decor. Once you try an Ellia diffuser, you'll want one for every room in your home. Add to your own Ellia collection or buy one as a thoughtful gift.

Browse the entire product family at www.ellia.com.

CONTACT US

Questions or concerns? We're here to help. Contact a Consumer Relations representative by phone or email to help answer any questions. Please be sure to have the model number of your product available.

For service in the USA

email: cservice@ellia.com

phone: 1.248.863.3160

Monday to Friday, 8:30am–7:00pm EST

For service in Canada

email: cservice@homedicsgroup.ca

phone: 1.888.225.7378

Monday to Friday, 8:30am–5:00pm EST



ESSENTIAL OILS AND PETS

We should always exercise caution when using essential oils around our pets. Keep all essential oil and aromatherapy products (like diffusers) out of reach of pets. Keep open bottles away from pets to avoid internal consumption. We do not recommend the topical use of essential oils on pets, as they have a strong sense of smell and cannot get rid of the oil if they don't like it or it is disturbing them. When diffusing essential

oils around pets, always diffuse in a well-ventilated area and leave an option for them to remove themselves from the space, such as leaving a door open. Every animal is different, so carefully observe how each animal responds when introducing an essential oil for the first time. If irritation occurs, discontinue the use of the essential oil. We recommend seeking medical attention if ingestion of essential oil occurs.

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING

- Always place diffuser on a firm, flat surface.
- Always unplug the unit after using and before cleaning.
- DO NOT reach for a unit that has fallen into water. Unplug it immediately.
- DO NOT place or drop into water or other liquids.
- Use this unit only for its intended purpose as described in this document, the Quick-Start Guide, and User Guide.
- Do not use attachments not recommended by HoMedics; specifically any attachments not provided with this unit.
- NEVER drop or insert any object into any opening.
- DO NOT place the diffuser near heat sources, such as a stove.

- Always keep the cord away from high temperature and fire.
- DO NOT use outdoors. For indoor use only.
- Never cover the unit while it is operating.
- If the cord sustains damage, you must stop using this product immediately and contact HoMedics Consumer Relations (see Warranty section for Consumer Relations contact information).
- Do not attempt to adjust or repair the unit. Servicing must be performed by professional, qualified personnel.
- Stop using this unit if there is an unusual noise or smell.
- Unplug this unit when not in use for a long period of time.
- Do not wash, adjust, or move this unit without first unplugging it from the electrical outlet.
- Keep this unit out of reach of children.

FCC AND IC STATEMENTS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules and CAN ICES-3 (B) /NMB-3 (B). These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by HoMedics could void the user's authority to operate this equipment.

1-YEAR LIMITED WARRANTY

For detailed warranty instructions, visit: www.ellia.com.

To obtain warranty service on your Ellia product, contact a Consumer Relations representative by the telephone number or email address for your country of residence. Please make sure to have the model number of the product available.

For service in the USA

email: cservice@ellia.com
phone: 1.248.863.3160
Monday to Friday, 8:30am–7:00pm EST

For service in Canada

email: cservice@homedicsgroup.ca
phone: 1.888.225.7378
Monday to Friday, 8:30am–5:00pm EST

Ellia and Ellia Open Your Senses are trademarks of HoMedics, LLC.